

# Safety Emergency Stop Relay SR2C



## User Information

English translation

it works

### Correct Use

The SR2C is a universal emergency stop safety switching device with two safe relay outputs that can quickly and safely stop the moving parts of a machine or system in case of danger.

Applications for the SR2C include single or dual-channel emergency stop circuits and guard monitoring on machines and systems.

### Features

- 2 safe, redundant relay outputs
- Connection of:
  - Emergency stop buttons
  - Safety switches
  - Non-contact safety switches
- Single and dual-channel operation possible
- Feedback loop for monitoring downstream contactors or expansion modules
- Cyclical monitoring of the output contacts



(not for plug-in terminals)

- Indication of the switching state via LED
- 2 start behaviors possible:
  - Monitored manual start
  - Automatic start
- Up to PL e, SILCL 3, category 4

### Function

The emergency stop safety switching device SR2C is designed for safe isolation of safety circuits according to DIN EN 60204-1 and can be used up to safety category 4, PL e according to DIN EN ISO 13849-1.

The internal logical system closes the safety contacts when the start button is pressed.

If the emergency stop circuit is opened, the positively driven safety contacts are opened and safely switch the machine off. It is ensured that a single fault does not lead to a loss of the safety function and that every fault is detected by cyclical self-monitoring no later than when the system is switched off and switched on again.

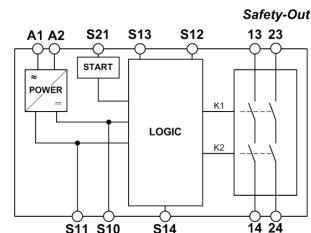


Fig. 1 Block diagram SR2C

### Installation

As per DIN EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. It is mounted on a 35-mm DIN rail according to DIN EN 60715 TH35.

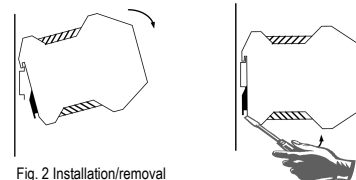


Fig. 2 Installation/removal

### Safety Precautions




- Installation and commissioning of the device must be performed **only by authorized personnel**.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this user information, otherwise there is a risk that the safety function will be lost.

- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.

### Electrical Connection

- When the 24V version is used, a control transformer according to EN 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected.
- External fusing of the safety contacts (4A slow-blow or 6A quick-action or 10A gG) must be provided.
- A maximum length of the control lines of 1000 meters with a line cross section of 0.75 mm<sup>2</sup> must not be exceeded.
- The line cross section must not exceed 2.5 mm<sup>2</sup>.
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty.



- A1: Power supply
- A2: Power supply
- S11: DC 24V control voltage
- S10: Control line
- S12: Start control line
- S13: Control line
- S14: Control line
- S21: Control line
- 13-14: Safety contact 1
- 23-24: Safety contact 2

Fig. 3 Connections

A01  
A100


E61-136-00

## User Information


### Applications

Depending on the application or the result of the risk assessment according to DIN EN ISO 13849-1, the device must be wired as shown in Fig. 1 to Fig. 9. In order to activate earth fault monitoring, the PE must be connected only to the power supply unit on the 24V version in accordance with EN60204-1.


### Emergency Stop Circuit

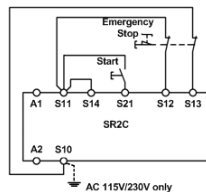


**Fig. 1:**  
Two-channel emergency stop circuit with short circuit and earth fault monitoring.  
(category 4, PL e)

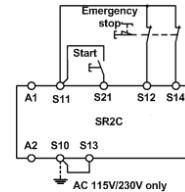


**Fig. 2:**  
Two-channel emergency stop circuit with earth fault monitoring.  
(category 3, PL d)

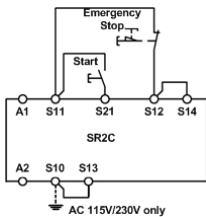


**Fig. 3:**  
Single-channel emergency stop circuit with earth fault monitoring.  
(category 1, PL c)

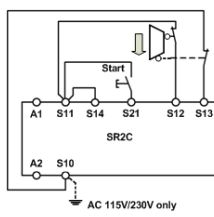

**Fig. 4:**  
Two-channel sliding guard monitoring with short circuit and earth fault monitoring.  
(category 4, PL e)

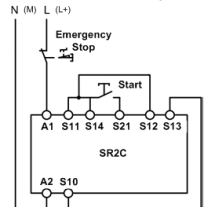


**Fig. 5:**  
Single-channel emergency stop circuit without fault monitoring of the emergency stop button and the supply cables.  
(up to category 2, PL c)

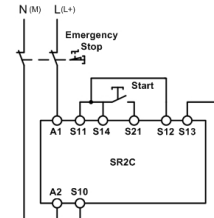


**Fig. 6:**  
Two-channel emergency stop circuit without fault monitoring of the emergency stop button and the supply cables.  
(up to category 3, PL d)

### Starting Behavior




**Fig. 7:**  
Monitored manual start.  
It is monitored that the start button was opened before the emergency stop button closes.  
(Prerequisite: operating voltage must not be interrupted.)



**Fig. 8:**  
Automatic start.  
Max. perm. delay during closing of the safety switches on S12 and S13:  
S12 before S13: 300 ms  
S13 before S12: any

**Warning:**  
Safety contacts switch immediately when the power supply is connected.

### Feedback Loop

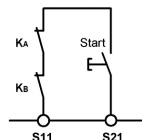

**Fig. 9:**  
Feedback loop.  
Monitoring of externally connected contactors or expansion modules.

### Commissioning Procedure

**Note:** The items listed under "Electrical connection" must be observed during commissioning.

#### 1. Wiring emergency stop circuit:

Wire the emergency stop circuit according to the required Performance Level determined (see Fig. 1 to Fig. 6).

#### 2. Wiring start circuit:

Wire the start circuit according to Fig. 7 or Fig. 8 to set the starting behavior.

#### Warning:

If "Automatic start" is set, bear in mind that the safety contacts will switch immediately after the power supply is connected. If "Monitored manual start" is set, the start button must be opened after wiring.

#### 3. Wiring feedback loop:

If your application provides for external contactors or expansion modules, connect them to the device according to Fig. 9.

#### 4. Wiring power supply:

Connect the power supply to terminals A1 and A2.

**Warning:** Wiring only in de-energized state.

#### 5. Starting the device:

Switch on the operating voltage.

#### Warning:

If the "Automatic start" starting behavior is set, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.

LEDs **K1** and **K2** are lit.

#### 6. Triggering safety function:

Open the emergency stop circuit by actuating the connected safety switch. The safety contacts open immediately.

#### 7. Reactivation:

Close the emergency stop circuit. If "Automatic start" is selected, the safety contacts will close immediately.

If the "Monitored manual start" starting behavior is set, close the start button to close the safety contacts.



## User Information

### Maintenance

The device must be checked once per month for proper function and for signs of tampering and bypassing of the safety function.

The device is otherwise maintenance free, provided that it was installed properly.

### What to Do in Case of a Fault?

#### Device does not switch on:

- Check the wiring by comparing it to the wiring diagrams.
- Check the safety switch used for correct function and adjustment.
- Check whether the emergency stop circuit is closed.
- Check whether the start button (with manual start) is closed.
- Check the operating voltage at A1 and A2.
- Is the feedback loop closed?

#### Device cannot be switched on again after an emergency stop:

- Check whether the emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (with manual start)?
- Is the feedback loop closed?

If the fault still exists, perform the steps listed under "Commissioning Procedure".

If these steps do not remedy the fault either, return the device to the manufacturer for examination.

**Opening the device is impermissible and will void the warranty.**

### Safety Characteristics According to DIN EN ISO 13849-1 DIN EN 62061

The device is certified according to DIN EN ISO 13849-1 and DIN EN 62061 up to a Performance Level of PL e and a safety integrity level for partial systems of SILCL 3.

The specified PL and SILCL values were determined under the following worst-case conditions for an emergency stop device.

#### Note:

Additional data can be requested from the manufacturer for applications that deviate from these conditions.

#### DIN EN ISO 13849-1:2008-12

Performance Level	e
Category	4
MTTF <sub>d</sub>	848 years
DC / DC <sub>avg</sub>	99%
Utilization time	20 years
d <sub>op</sub>	365 days/year
h <sub>op</sub>	24 hours/day
t <sub>cycle</sub>	3600 seconds/cycle
Load case	Full load AC15

#### DIN EN 62061:2005-10-01

SILCL	3
Utilization time	20 years
Hardware fault tolerance	1
DC / DC <sub>avg</sub>	99%
SFF	99.6%
PFH <sub>d</sub>	2.7E <sup>-11</sup>

### Techn. Data

Corresponds to the standards	EN 60204-1; DIN EN ISO 13849-1; DIN EN 62061
Operating voltage	AC 230V, AC 115V, AC/DC 24V AC: 50-60Hz
Permissible deviation	+ / - 10%
Power consumption	approx. 3 VA/1.8 W
Control voltage at S11	DC 24V
Control current S11...S14	Approx. 40 mA
Safety contacts	2 NO contacts
Max. switching voltage	AC 250V
Safety contact breaking capacity (13-14, 23-24)	AC: 250V, 1500VA, 6A for ohmic load, 230V, 4A for AC-15 DC: 24V, 30W, 1.25A for ohmic load; 24V, 30W, 2A for DC-13
Minimum contact load	24V, 20mA
Contact fuses	4A slow-blow or 6A quick-action or 10A gG
Max. line cross section	2.5 mm <sup>2</sup>
Max. length of control line	1000 m with 0.75 mm <sup>2</sup>
Contact material	AgNi
Contact service life	mech. approx. 1 x 10 <sup>7</sup> , electr. 1 x 10 <sup>5</sup> operating cycles
Test voltage	2.5 kV (control voltage/contacts)
Rated impulse withstand voltage, leakage path/air gap	4kV (DIN VDE 0110-1)
Rated insulation voltage	250V
Degree of protection	IP20
Temperature range	DC 24V: -15°C to +60°C AC 230/115V: -15°C to +40°C
Degree of contamination	2 (DIN VDE 0110-1)
Overvoltage category	3 (DIN VDE 0110-1)
Weight	approx. 230g

A01  
A100

E61-136-00


# Safety Emergency Stop Relay SR2C



it works

## User Information

### Dimension Drawing

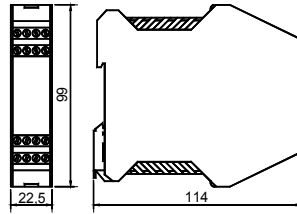

### Versions

Order no. 472150	SR2C, AC 230V (50-60Hz), fixed screw terminals
Order no. 472151	SR2C, AC 115V (50-60Hz), fixed screw terminals
Order no. 472152	SR2C, AC/DC 24V (AC: 50-60Hz), fixed screw terminals
Order no. 473150	SR2C, AC 230V (50-60Hz), plug-in terminals
Order no. 473151	SR2C, AC 115V (50-60Hz), plug-in terminals
Order no. 473152	SR2C, AC/DC 24V (AC: 50-60Hz), plug-in terminals
Order no. 472592	EKLS4, plug-in screw terminals kit
Order no. 472593	EKLZ4, plug-in spring-cage terminals kit

## Konformitätserklärung EC Declaration of Conformity



**Hersteller:** H. ZANDER GmbH & Co. KG  
**Producer:** Am Gut Wolf 15 • D-52070 Aachen

**Produktgruppe:** Sicherheits-Not-Aus-Schaltgeräte  
**Product Group:** Safety emergency stop switching devices

**Die Produkte stimmen mit den Vorschriften folgender Europäischer Richtlinien überein:**  
The products conform with the essential protection requirements of the following European directives:

**2006/42/EG** : Maschinenrichtlinie  
2006/42/EG : Machinery directive

**2004/108/EG** : EMV Richtlinie  
2004/108/EG : EMC directive

**2006/95/EG** : Niederspannungsrichtlinie  
2006/95/EG : Low voltage switchgear directive

**Die Übereinstimmung der bezeichneten Produkte mit den Vorschriften der o.a. Richtlinie wird, falls anwendbar, nachgewiesen durch die vollständige Einhaltung folgender Normen:**

If applicable, the conformity of the designated products is proved by full compliance with the following standards:

EN 60439-1:2005-01	EN 60947-1:2008-04	EN 60947-5-1:2005-02
EN 60947-7-1:2003-07	EN 61000-6-2:2006-03	EN 61000-6-3: 2005-05
DIN EN 61326-3-1:2008-11	DIN EN ISO 13849-1:2008-12	DIN EN ISO 13849-2:2003
IEC 62061:2005-10		

Produkt Name Product Name	Anbringung der CE-Kennzeichnung Affixing of CE marking:	Zertifikats- Nr. No of Cer- tificate
SRLC	2010	01/205/0594/ 09
SR2C	2010	01/205/0594/ 09
SR3C	2010	01/205/0594/ 09

Produkt Name Product Name	Anbringung der CE-Kennzeichnung Affixing of CE marking:	Zertifikats- Nr. No of Cer- tificate

Benannte Stelle: Nr. NB 0035  
TÜV Rheinland Industrie Service GmbH  
10882 Berlin  
Zertifizierungsstelle für Maschinen

Dokumentationsbeauftragter: Christiane Nitschalk  
(Documentation manager)

Aachen, den 15.12.2009

Dipl.-Ing. Walter Zander  
Geschäftsleitung  
(General Manager)

Dipl.-Ing. Alfons Austerhoff  
Leiter CE-Konformitätsbewertung  
(Manager for EC declaration of conformity)